


# PROTECT YOUR HONEYCOMB PANEL

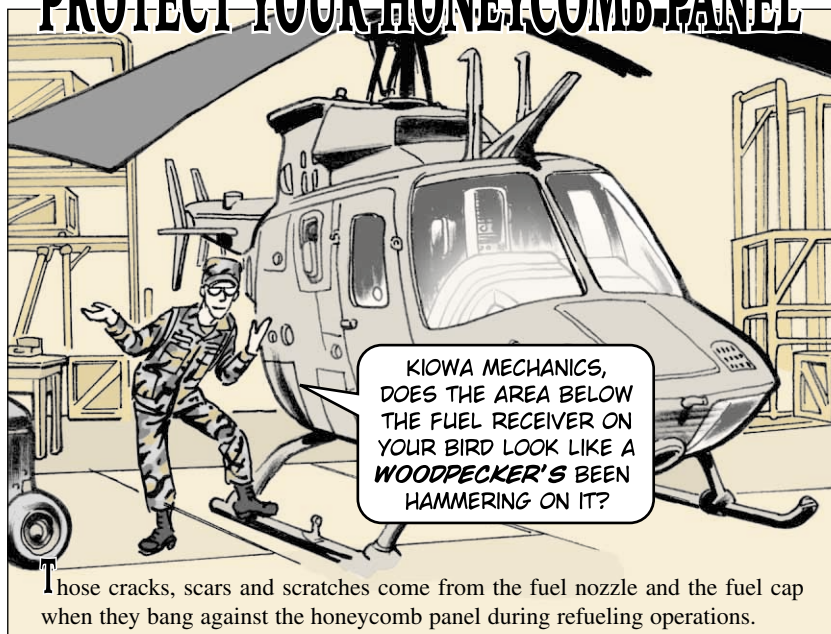

Those cracks, scars and scratches come from the fuel nozzle and the fuel cap when they bang against the honeycomb panel during refueling operations.

If the honeycomb panel is damaged, repair it per Para 2-1-62 of TM 1-1520-248-23. Then, protect the panel by adding a rubber pad like it says in Para 2-1-79 of TM 1-1520-248-23.

